



## Installing cimco server key file.

**The only location the licence.key file** should be installed in is C:\CIMCO\LicenseServer. The licence.key should NOT be installed on any clients. If it has been installed then you will have to manually delete the .key file from each client PC and also from C:\CIMCO\DNCCMax6 on the DNC-Max server

Log onto the server where you are going to install the Cimco license server. Copy the cimco key file to the desktop of the server. Start the Cimco installation program. Now follow the instructions on the screen. On the *Select Components* page you must select the *CIMCO Network License Server*. When the installation is completed, you will find a shortcut to the license server console in the *CIMCO Software* program group in the *Start* menu

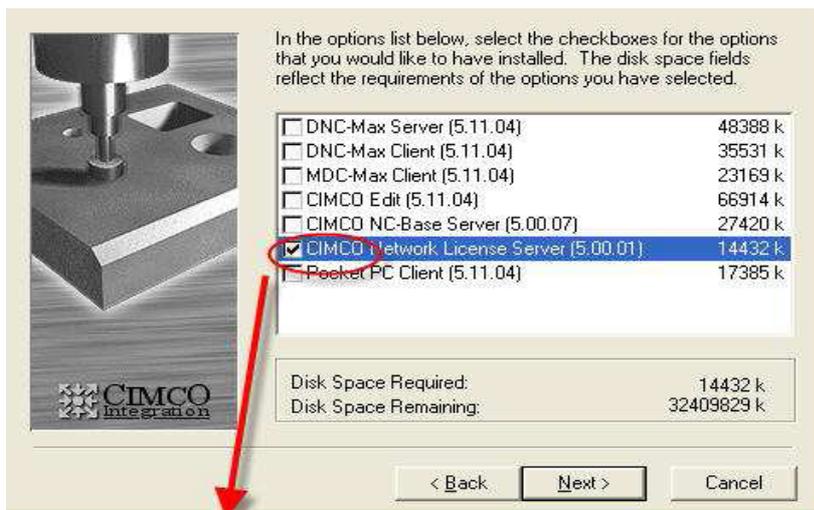

Run the Cimco Network License Server and click on the select key file button. Browse to the key file copied onto the desktop and click OK.

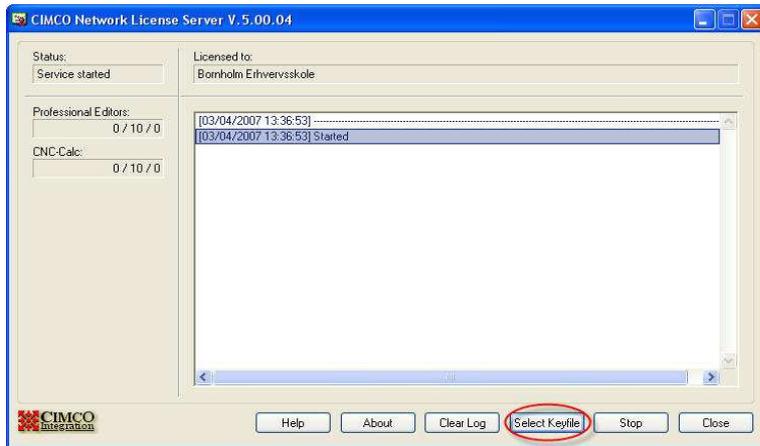

The server should start. Once the server has started the clients (pc running Cimco edit and CncCalc) should find the server automatically. You should not need to install or configure any software on the clients.